

7" Digital Photo Frame

User Manual



SHDPF7V2

shintaro.com.au



7" Digital Photo Frame

Contents

Safety Information / Package Contents.....	4
Remote Control Description.....	5
Quick Start.....	5
Operation Guide.....	6
OSD Menu.....	10
File Compatibility Chart.....	11
FAQ.....	12

Safety Information

- Keep away from water, moisture and dusty areas
- Working temperature 0-40°C. Never store in a hot or very cold place
- Be careful not to drop or knock the photo frame
- Never try to open the case yourself, always seek technical support
- Connect the AC adaptor to both the DC IN jack and to the power outlet (mains socket)
- Only use attachments / accessories approved by the manufacturer
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet

Warning: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

Package Contents



Digital Photo Frame



Power Adapter



IR Remote Control

Remote Control Description



Quick Start

Step 1 Insert the jack of the DC adaptor into the digital photo frame, and then plug the DC adaptor into a standard power outlet.

Step 2 Insert memory card into the photo frame

Operation Guide

1. Function Select

In the function select menu (main menu), you can select different modes.



2. Memory Card select

To display pictures, press ▼ to select pictures stored in inserted memory card

Note: If there are no pictures in memory, a note will appear on the screen



3. Picture Display Screen


Brightness: Press ◀ to adjust brightness of picture

Contrast: Press ▶ to adjust contrast of picture

Saturation: Press ▲ to adjust saturation of picture

3.1 Display Picture from Memory Card

When displaying a picture from your memory card, press **ENTER** or E button on the frame, the navigation bar will appear on the screen

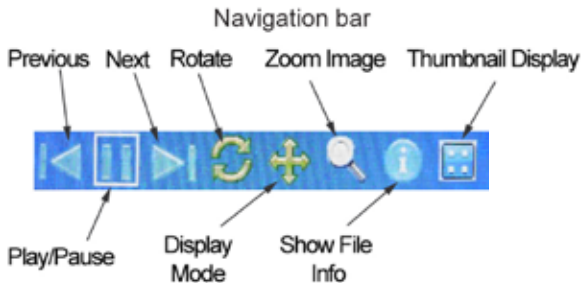


- Previous image
- Play / Pause slideshow
- Next image
- Rotate image
- Display mode (original / crop / stretch)
- Zoom image
- Show file info
- Picture thumbnail display

3.3 Picture Mode

Hold Exit or button M on the frame for 3 seconds to go to the Picture Preview mode. In the Picture Preview mode, press ◀ ▶ ▲ ▼ to choose the picture you want to view. Press **ENTER** to slideshow the picture.

4. Setup Menu

Choose setup menu to setup display information

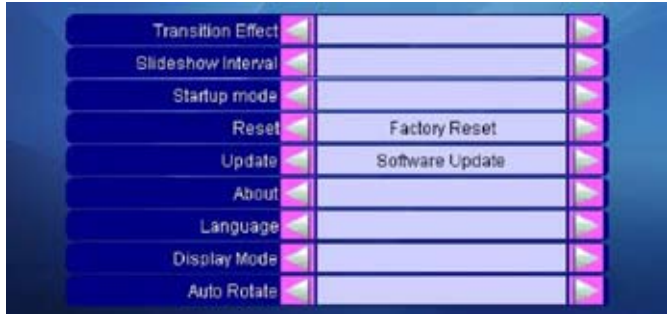

4.1 Auto Rotate

The photo automatically turns 90 degrees as the photo frame turns 90 degrees.



Note: When auto rotate function is on, you can not set up rotate function by pressing rotate button on R/C or choose rotate on the navigation bar. The above settings are subject to change if the product specifications are modified.

OSD Menu	Function Description
Function Menu	
Photo	Picture Slideshow
Memory Menu	
Memory Format	SD / MMC / MS, Internal Flash Memory
Settings	
Transition Effect	22
Slideshow Interval	3/5/7/10/15/20/30 sec 1/10/30 min 1/2/4/8/12 hr 1 day
Startup mode	Slideshow/Main menu
Reset	Factory Reset: Restore to the factory settings
Update	Software update
About	Software version
Language	Multi-language
Display Mode	Original: preserves dimension ratios of original picture Stretch: stretches picture to fit screen. Crop: full screen picture, preserves dimension ratios, but crops picture to do so.
Auto Rotate	ON: auto rotate on OFF: auto rotate off

**The above settings are subject to change in case of any spec modification.*

File Compatibility Chart

Function Form		Mstar 01 support	Comment
Picture format	JPEG	✓	Maximum Resolution: 8000 X 8000 pixels
	BMP	✓	

Frequently Asked Questions

Q. Why can't the Digital Photo Frame play all images or movie files?

A: The Digital Photo Frame can support JPEG, MP3 and some video format depending on the product specification. It may not read some files downloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

A: First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?

A: Higher resolution pictures usually load slower.

Q. Why can't the DPF read my USB storage device?

A: Firstly, check that the USB storage device is working by plugging it into a PC or other DPF, and that there is actually data on it. Secondly, check that the data is in a format/file type supported by the DPF. Thirdly, turn off the DPF, turn it on again.

Q. Who can I contact if I am having trouble setting up my DPF?

A: Email: support@shintaro.com.au

BLANK



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

NOTE: All rights for modifications reserved