

# Southern Hemisphere Moon Phase Image Update

## How to Update the Firmware:

- 1) Save the two files located within the ZIP file to an SD or USB drive supported by the DPF
- 2) While the frame is on, insert the SD or USB drive into the USB port
- 3) A firmware notification will automatically appear, press the “ ENTER” key on the remote control to accept
- 4) Please wait for the update to begin, this may take several minutes, once finished the DPF will turn off and back on automatically
- 5) Please note: Do not turn off the DPF while updating is in progress

